

## OPC Drum Versions for Brother Printers

### Brother DR-200 (helical gear)

AEG-Type: OT 0317

**For use in:**

HL-720/730/730plus/730dx/760 /  
MFC-4300/4350/4450/4550/4550plus/4600/  
4650/7550/7650/7750/9050/9060/9500/9550 /  
IntelliFax 2550ml/2600/2750/3550/3650/3750 /  
Fax 8000P/8050P/8060P/8200P/8250P/8650P



OPC Drum Versions for Brother Printers

## Brother DR-200 **NV** (straight gear)

AEG-Type: OT 3300

**For use in:**

- HL-720/730/730plus/730dx/760 /
- MFC-4300/4350/4450/4550/4550plus/
- 4600/4650/7550/7650/7750/9050/9060/9500/9550 /
- IntelliFax-2550ml/2600/
- 2750/3550/3650/3750 /
- Fax-8000P/8050P/8060P/8200P/8250P/8650P



OPC Drum Versions for Brother Printers

## Brother DR-250 / DR-8000 (helical gear)

 
AEG-Type: OT 0318

**For use in:**

DCP-1000 / MFC-4800/6800/9030/9070/9160/9180

IntelliFax-2800/2900/3800 /

FAX-2900/8070P

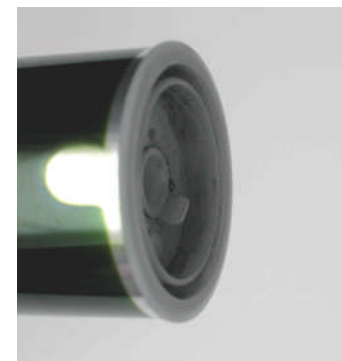

OPC Drum Versions for Brother Printers

## Brother DR-250 / DR-8000 NV (straight gear)

 
AEG-Type: OT 3300

**For use in:**

DCP-1000 / MFC-4800/6800/9030/9070/9160/9180

IntelliFax-2800/2900/3800 /

FAX-2900/8070P

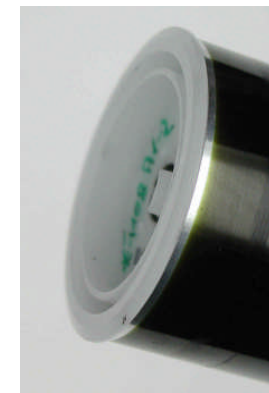


OPC Drum Versions for Brother Printers

## Brother DR-300 (helical gear)

 AEG-Type: OT 0318

**For use in:**  
HL-820/1040/1050/1060/1070/P2000

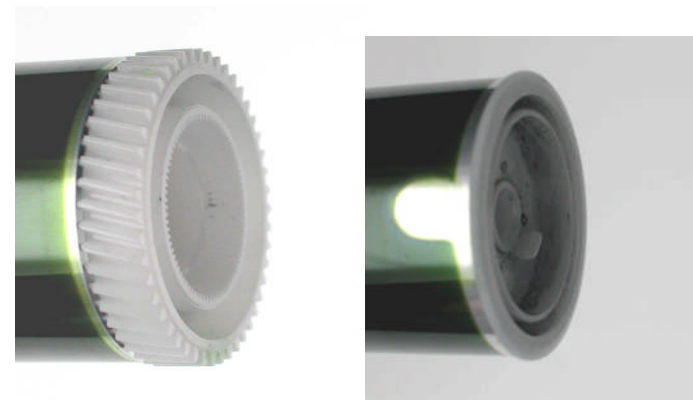

OPC Drum Versions for Brother Printers

## Brother DR-350 / DR-2000 (straight gear) Brother DR-360 / DR-2100

AEG-Type: OT 0272




### For use in:

DCP-7010/7020/7025 / FAX 2920

HL-2030/2040/2070N/2140/2150/2170

INTELLIFAX 2820

 MFC-7220/7225N/7420/7440/7820N/7840

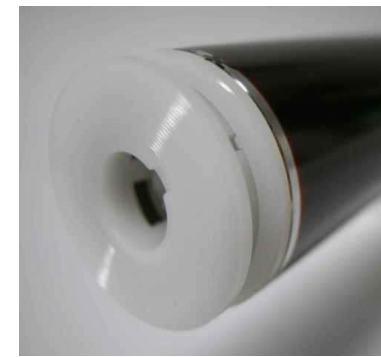


OPC Drum Versions for Brother Printers

## Brother DR-400 / DR-6000 (helical gear)

 AEG-Type: OT 0329

**For use in:**

HL-1030/1230/1240/1250/1270N/1430/1440/1450/1470N/P2500 /  
DCP-1200/1400 / FAX-8350P/8360P/8750P /  
IntelliFax-4100/4750/4750e/5750/5750e /  
MFC-8300/8500/8600/8700/9600/9650/9660/9700/9750/9760/  
9800/9850/9860/9870/9880

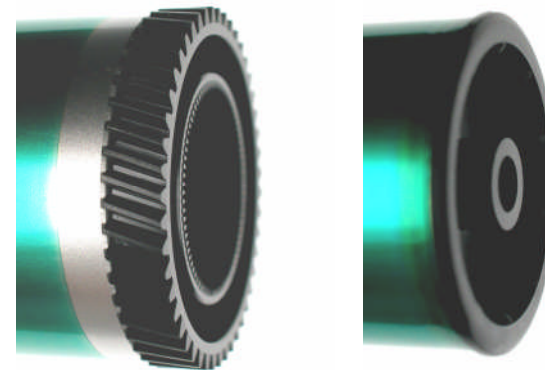

OPC Drum Versions for Brother Printers

## Brother DR-400 / DR-6000 **NV** (straight gear)

AEG-Type: OT 0348

**For use in:**

HL-1030/1230/1240/1250/1270N/1430/1440/1450/1470N/P2500 /  
DCP-1200/1400 / FAX-8350P/8360P/8750P /  
IntelliFax-4100/4750/4750e/5750/5750e /  
MFC-8300/8500/8600/8700/9600/9650/9660/9700/9750/9760/  
9800/9850/9860/9870/9880



 
OPC Drum Versions for Brother Printers

## Brother DR-500 / DR-7000 (helical gear)

AEG-Type: OT 0329

**For use in:**

HL-1650/1650N/1650Nplus/1670N/1850/1870N/  
5030/5040/5050/5070N /  
DCP-8020/8025D/8025DN /  
MFC-8420/8820D/8820DN

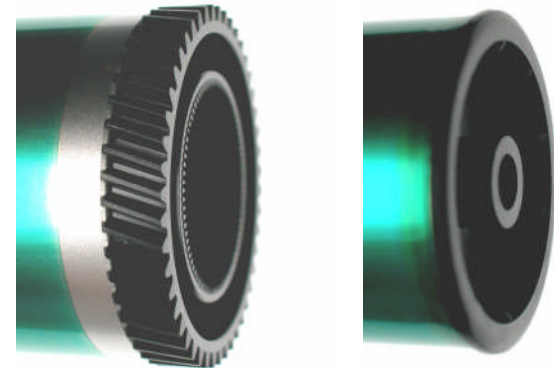

OPC Drum Versions for Brother Printers

## Brother DR-510 / DR-3000 (straight gear)

AEG-Type: OT 0348

**For use in:**

HL-5130/5140/5140LT/5150D/5150DLT/5170DN/5170DNLT /  
DCP-8040/8045D/8440/8440LT/8840D/8840DN /  
MFC-8220/8440/8440LT/8840D/8840DN



OPC Drum Versions for Brother Printers

## Brother DR-520 / DR-3100 Brother DR-620 / DR-3200

AEG-Type: OT 3371

 
 


**For use in:**

HL-5240/5250/5270/5280/5340/5350/5370/5380 /

DCP-8060/8065/8070/8080/8085 /

MFC-8300/8370/8380/8480/8500/8600/8880/8890/9600/9700/9800/9870

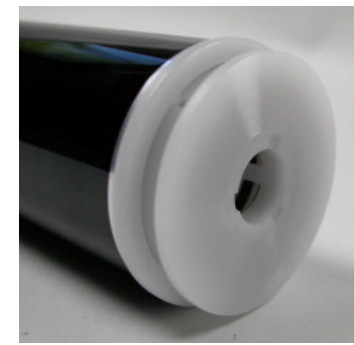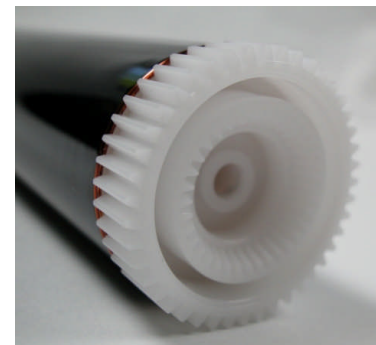

OPC Drum Versions for Brother Printers

## Brother DR-8050 (straight gear)

AEG-Type: OT 3300

**For use in:**  
Fax-2880

